

BC 1
TB



act-audio

GAIN



0 1 2 3 4 5 6

TB

REMOTE

0 1 2 3 4 5 6

REMOTE

0 1 2 3 4 5 6

LISTEN

TB-BUS

10kHz

0 1 2 3 4 5 6

FREQ

1kHz

100Hz

0 1 2 3 4 5 6

LEVEL

UNCAL

ON

OSC

OSC TO

GR/AUX

OSC TO

PGM

STU-SRC

AUX4

AUX3

AUX2

AUX1

MIX

0 1 2 3 4 5 6

TB

DIM

0 1 2 3 4 5 6

STU-PHONES

0 1 2 3 4 5 6

TB

TB

DIM

0 1 2 3 4 5 6

STU-SPEAKERS

AUTOCUT

CUT

MIC

MIC ON



LINE ON



ON AIR



ENABLE



GR/AUX

TB

GR/AUX

PGM

TB PGM

CPL

TO STUDIO

TELCO

TB TELCO

TELCO

LINE

LINE

TB

LISTEN

LISTEN

STU

TB STUDIO

STUDIO

